

Operator Bracket

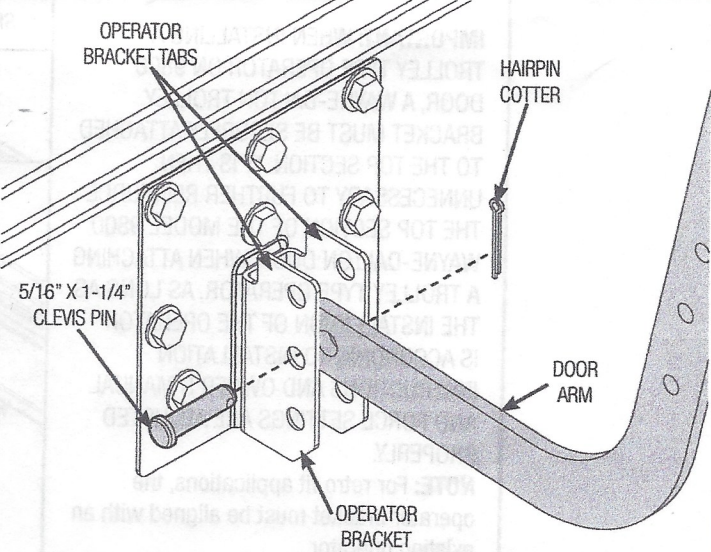
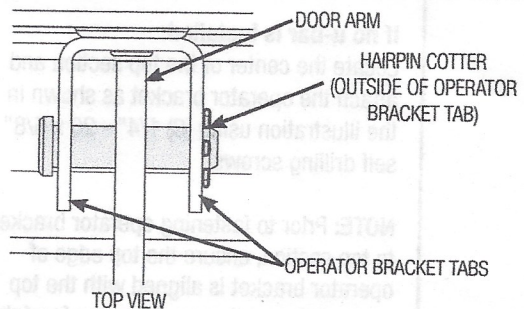
Installation Instructions Insert

For Models 9700/9800

Use this insert in conjunction with your door's Installation Instructions and owner's manual.

	Operator Bracket	
<p>Tools Needed:</p> <p>Power Drill 7/16" Socket Driver</p>	<p>⚠ WARNING</p> <p>POTENTIAL DAMAGE TO YOUR 9800 TOP SECTION MAY OCCUR IF INSTALLER DOES NOT FOLLOW OPERATOR BRACKET INSTALLATION INSTRUCTIONS CLOSELY. IT IS VERY IMPORTANT TO ALIGN THE TOP EDGE OF THE OPERATOR BRACKET WITH THE SECTION AS SHOWN. IT IS EQUALLY IMPORTANT FOR THE INSTALLER TO NEVER INSTALL THE OPERATOR BRACKET UPSIDE DOWN. NOT FOLLOWING THESE INSTRUCTIONS CAN RESULT IN SCREWS POKING THROUGH THE FRONT OF THE DOOR IN THE RAISED PANEL LOCATIONS.</p>	<p>IF NO U-BAR IS INSTALLED</p> <p>OPERATOR BRACKET ALIGNED WITH TOP OF SECTION</p> <p>OPERATOR BRACKET CENTERED IN THE MIDDLE OF TOP SECTION</p> <p>(6) 1/4"-20 X 5/8" SELF DRILLING SCREWS</p> <p>SIDE VIEW</p>
	<p>IMPORTANT: WHEN INSTALLING A TROLLEY TYPE OPERATOR ON 9800 DOOR, A WAYNE-DALTON TROLLEY BRACKET MUST BE SECURELY ATTACHED TO THE TOP SECTION. IT IS THEN UNNECESSARY TO FURTHER REINFORCE THE TOP SECTION OF THE MODEL 9800 WAYNE-DALTON DOOR, WHEN ATTACHING A TROLLEY TYPE OPERATOR, AS LONG AS THE INSTALLATION OF THE OPERATOR IS ACCORDING TO INSTALLATION INSTRUCTIONS AND OWNER'S MANUAL AND FORCE SETTINGS ARE ADJUSTED PROPERLY.</p> <p>NOTE: For retro fit applications, the operator bracket must be aligned with an existing operator.</p>	<p>IF U-BAR IS INSTALLED</p> <p>U-BAR</p> <p>SIDE VIEW OF U-BAR</p> <p>1/4"-20 X 7/8" SELF DRILLING SCREWS</p> <p>OPERATOR BRACKET</p> <p>U-BAR</p> <p>OPERATOR BRACKET</p>
	<p>If no u-bar is installed:</p> <p>Locate the center of the top section and attach the operator bracket as shown in the illustration using (6) 1/4" - 20 x 5/8" self drilling screws.</p> <p>NOTE: Prior to fastening operator bracket to top section, ensure the top edge of operator bracket is aligned with the top edge of the section as shown on far right.</p>	<p>TOP OF SECTION</p> <p>TOP EDGE OF OPERATOR BRACKET</p> <p>U-BAR</p> <p>OPERATOR BRACKET</p> <p>SIDE VIEW OF U-BAR WITH OPERATOR BRACKET INSTALLED</p> <p>OPERATOR BRACKET IN PLACE UNDER U-BAR</p> <p>(6) 1/4"-20 X 5/8" SELF DRILLING SCREWS</p>

	Operator Bracket Continued...	
	<p>If u-bar is installed: Remove, but retain (4-6) 1/4" - 20 x 7/8" self drilling screws from the center of the u-bar, allowing the operator bracket to slide between the section and the u-bar. Locate the center of the top section and slide operator bracket under u-bar till the operator bracket is seated against the u-bar flange.</p> <p>NOTE: Prior to fastening operator bracket to top section, ensure the top edge of operator bracket is aligned with the top edge of the section as shown on far right. Attach the operator bracket using (6) 1/4" - 20 x 5/8" self drilling screws (as shown). Finish re-attaching the u-bar using the self tapping screws removed previously.</p>	

	Door Arm Attachment	
<p>Tools Needed: NONE</p>	<p>Align hole in the appropriate arm with holes in operator bracket tabs. Insert 5/16" x 1-1/4" clevis pin, making sure hole in clevis pin is outside of second tab of operator bracket. Insert hairpin cotter into clevis pin hole and spread hairpin cotter to ensure it will secure assembly.</p>	 

2 Please Do Not Return This Product To The Store. Call Us Directly! Our Trained Technicians Will Answer Your Questions and/or Ship Any Parts You May Need. You can reach us Toll Free at 1-888-827-3667 for Consumer Assistance or online at www.wayne-dalton.com